


EXAMPLE: Subgrade of CBR 5 will be overlaid by 300mm layer of CBR 15 material. What equivalent CBR should be used for design of the pavement overlay CBR 15 material?

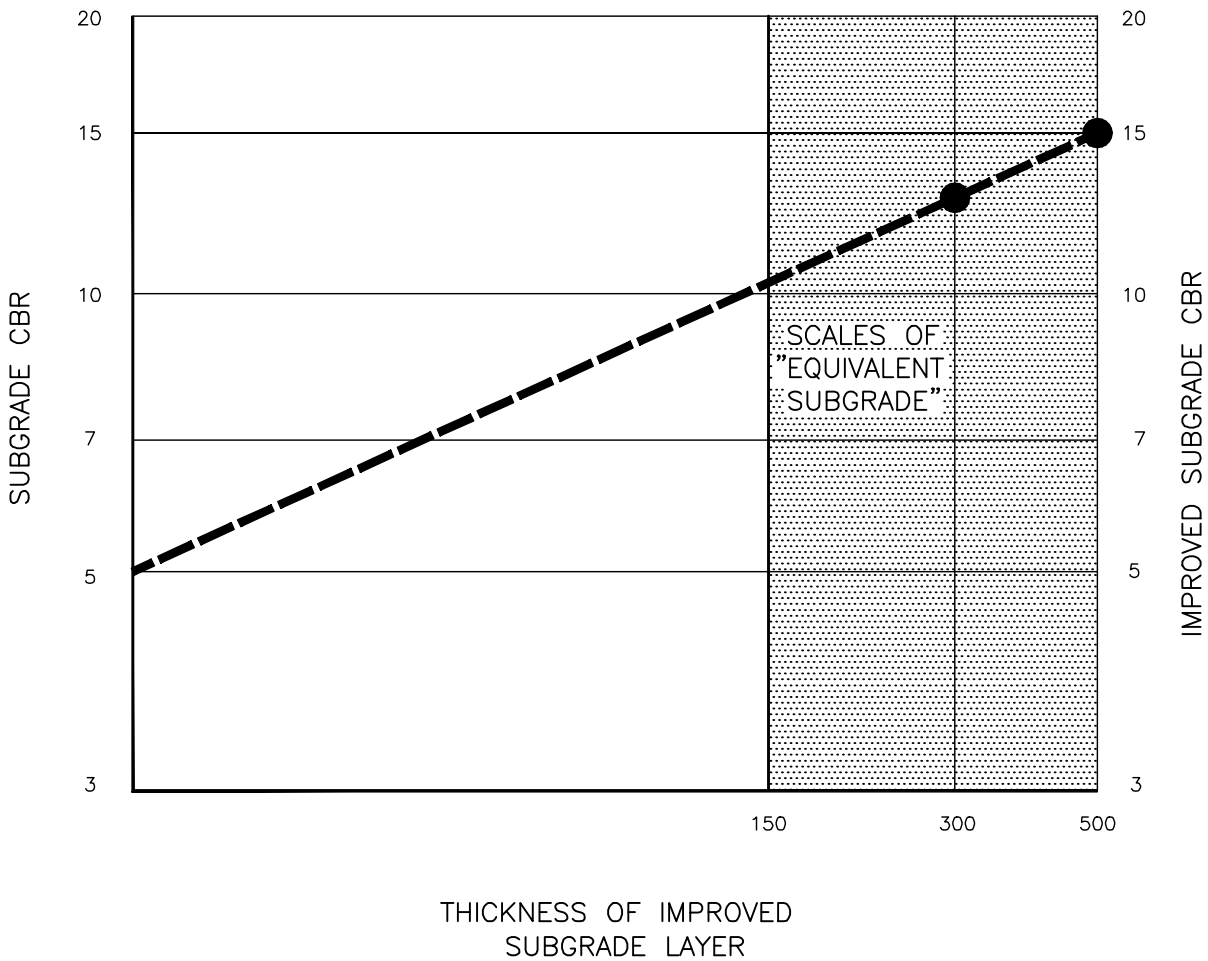

NOMOGRAPH FOR DETERMINING THE EFFECT OF SUBGRADE IMPROVEMENT LAYERS